


ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 298

ITEM DESCRIPTION: 1 DRAWER BEDSIDE

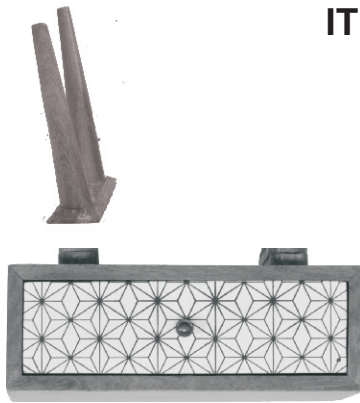


1

Reverse the bedside & place the leg as shown & align the leg to match the apron.



Reverse the bedside straight. Now your bedside is ready for use

4

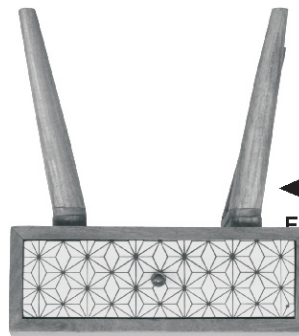

Insert the Bolt to fix the leg with the Bedside top and tighten the nut with the washer as shown in fig1

2

3

Fix the other leg the similar way

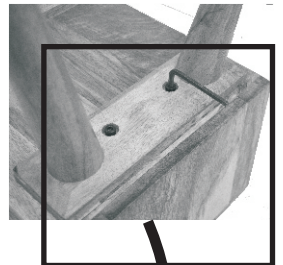


Fig. 1

